

Manufacturer of True Sine Wave Power Inverters and Related Products

## NC SERIES POWER INVERTER

**NEBS  
LEVEL 3  
CERTIFIED**

Exceeding Expectations for your Protection



- **N+1 REDUNDANT**
- **EXPANDABLE**
- **REMOTE SWITCHING**
- **TRUE SINE WAVE**
- **“HOT” INSERTABLE**
- **2000 WATT MODULES**
- **OPTIONAL SNMP**

Exeltech's NC Series Telecommunication Inverter Systems are engineered to address the high reliability and safety demands of the telecommunication industry.

NC series inverter systems are equipped with 2KW power modules. Modules are "hot" insertable, power levels are expandable, and modules can be added or replaced without interruption in power to your critical loads.

The NC system can be configured for power levels from 2 to 36KW single phase with 120Vac output. Up to 18KW per phase at 240Vac bi-phase or 12KW per phase at 208Vac three-phase with 48v inputs available.

A monitoring module plus any number of additional 2KW power modules combine to make a standard NC inverter. This type of system can be expanded as power requirements increase, and upgraded to be N+1 redundant as desired.

The NC system is extremely compact and lightweight. Power modules weigh only 9 lbs each and are equipped with LCD screens for quick access of system data.

Output voltage is precisely regulated, so that no measurable voltage change occurs on the output as input voltage fluctuates. Similarly, less than 0.5 volt change in output voltage will occur when the output load varies from 0 to 100% of rated power. With distortion of 2% maximum, this inverter offers the cleanest sine wave power available.

# NC SERIES MODULE OVERVIEW

## 1.2 Modules Overview

The NC Series inverters are a modular design and allows each system to be tailored for specific needs. Systems can range in output power, redundancy, and a variety of other options. This is done by selecting different combinations of modules to create a NC telecommunication inverter system.

### 1.2.1 Power Module Cage Assembly

The cage assembly can be designed to accept DC input of either positive or negative. It will house from 1 to 6 inverter power modules resulting in a system output of up to 12,000 Watts. It will also house an optional monitoring module (recommended). The left most power module is the system's master module. The next power module to the right is the system's redundant (backup) master module. For redundant operation the system **MUST** include a monitoring module. The monitoring module is required to initiate a transfer of control to the backup master module.

### 1.2.2 Power Modules

The power module is the backbone of the NC telecommunications inverter system and is the majority of the modules in all systems. Each module is capable of producing 2000 Watts of continuous output power. Each module can perform all of the functions to operate as a system's master module. The module will only perform the system master function when placed in the power module cage assembly location identified in the previous section. Each power module is equipped with an LCD display that can show power module status information as well as system status information.

### 1.2.3 Monitoring Module


The monitoring module provides a visual representation of different alarms created by the system. Each monitoring module has an ON/OFF switch for the system. If a monitoring module is not used the remote switch must be used to turn the system on and off. A monitoring module is required to detect a master power module failure and switch to the secondary master power module if it is available. There are a few different options available to monitor the NC inverter system.

#### 1. Alarm Card:

With the alarm card, system monitoring is basic and is seen manually through power module LCD displays. Pre set alarms (Alarm 1/Minor & Alarm 2/Major) are provided via dry form C relay contacts on the inverter systems backplane. Use of the other connections on the back plane may result in damage to the module or system.

#### 2. Monitor Card:

With the monitor card, system data is more detailed and can be seen either manually through power module LCD displays or through Ethernet connection which allows for remote monitoring of system data. Each phase's information can be reported via the Ethernet connection. The data can be sent to a PC to be viewed and logged or reported via SNMPv2 or an optional secure SNMPv3. Programmable alarms (Alarm 1/Minor & Alarm 2/Major) are provided via dry form C relay contacts on the inverter systems backplane. Product Status is used to program alarms. Use of the other connections on the back plane may result in damage to the module or system.

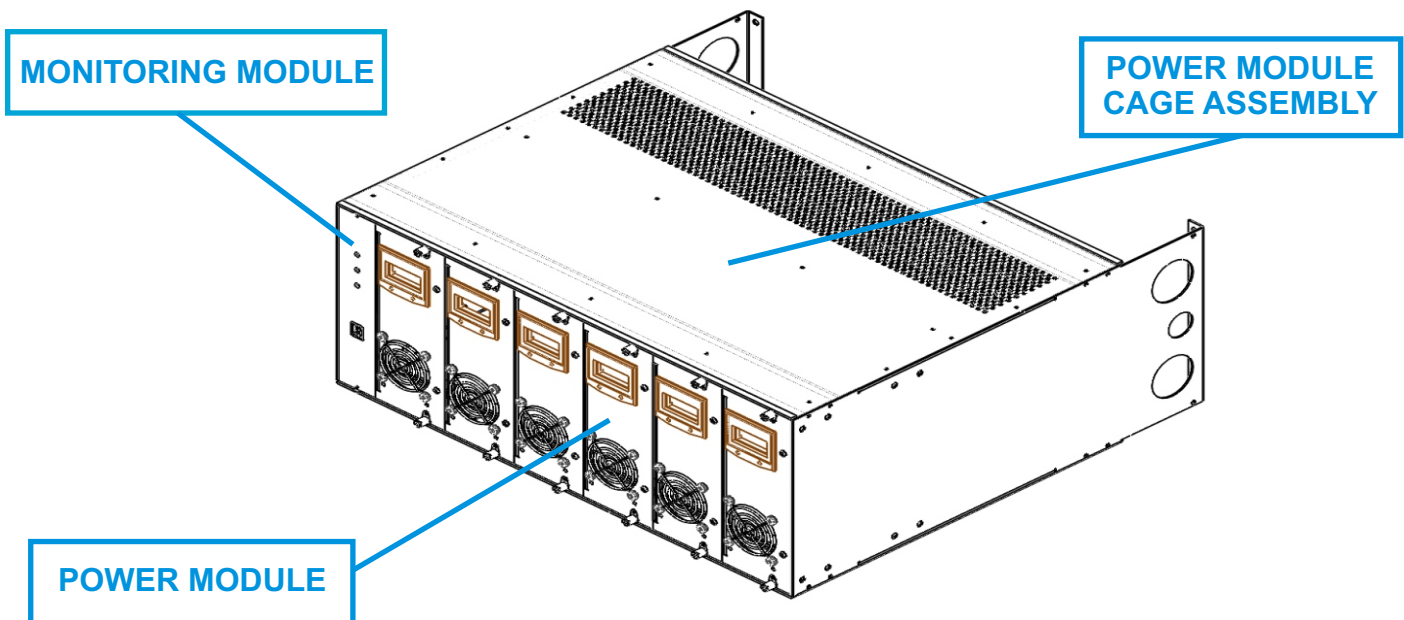

# NC SERIES SYSTEM OVERVIEW

The NC system can be configured from 2,000 to 12,000 Watts (1 to 6 power modules), with or without an optional monitoring module (highly recommended). With the monitoring module and a sufficient number of power modules, the system provides N+1 redundancy.

## **Remote On/Off Switch:**

A set of terminals are provided to turn the inverter system on and off from a remote location. The connection for the remote switch is on a remote alarm connector located under the rear access cover. Connect battery negative 'Bat(-)' to the 'Sw1' terminal to turn the inverter on. The maximum current in this connection is under 0.1 ADC, and has a maximum open circuit voltage of 48VDC. An appropriately rated switch should be used. The remote switch and front panel switch are "OR'd" together so if either switch is on, the inverter system will turn on, and both must be off for shut down. When using the remote switch, insure the front panel switch is in the "OFF" position to control the inverter system with the remote switch.

## **Over Voltage Protection:**

The inverter system will shutdown immediately if the DC voltage exceeds the set limits. When the voltage returns to the normal range, the inverter system will immediately restart. There is a small amount of hysteresis built into the over voltage turn off set point to avoid the possibility of turning off and on rapidly. An over voltage greater than 10% above the limit may cause damage.

## **Under Voltage Protection:**

The inverter system will shutdown when the DC voltage goes below the set limit. The inverter system monitoring module will set an alarm when the inverter system reaches a voltage 5% above the low voltage set limit. When the voltage rises to approximately 15% above the low voltage set limit, the inverter system will turn back on and the alarm condition will clear.

## **Power Modules**

### **DC Voltage Inputs:**

48VDC inputs are available. It is recommended to have a maximum ripple voltage of less than 5% with the peaks not going above  $V_{max}$  and below  $V_{min}$ .

### **AC Voltage Outputs:**

120V outputs are available (+/- 5%) at 60Hz, (+/- 0.1%).

### **Load Sharing:**

By control system design, the power modules will automatically load share current with other power modules. The load sharing occurs immediately when a module is either added or removed from a power module cage assembly. If a module fails for any reason, the remaining modules will immediately redistribute the load among themselves.

### **Cooling:**

A microprocessor controlled variable speed fan is located on the face plate of the power module. The fan will operate when the module senses an appropriate combination of temperature and power. Fan speed is monitored, and reported to the inverter system monitoring module. Fan speed can be displayed on the power module's LCD display.

### **Over Temperature Protection:**

Each power module will go into thermal shutdown when its internal temperature exceeds the maximum set point. Approximately 5C prior to thermal shutdown, a warning alarm will be sent to the inverter system monitoring module, and will also be displayed on the power module's LCD display. The power module will provide its full rated output up to the temperature listed in the specification sheet. Ambient temperatures in excess of the maximum specification will likely result in thermal shutdown unless the load is reduced appropriately (see detailed specifications for derating). When the power module shuts down, the alarm condition will persist and the cooling fans will continue to run. The power module will automatically restart when it has sufficiently cooled.

# NC SERIES SYSTEM OVERVIEW

## **Overload/Short Circuit Protection:**

If the load attempts to draw current in excess of this value, the output waveform will be “clipped” so that this limit is never exceeded.

The power module has a continuous output of 2000 Watts. In addition, the power module is also able to provide a 3 second surge of up to 4000 Watts (depending on the battery voltage and internal temperature). This surge current is available to supply the inrush current demanded by electronic or motor loads. If the surge persists for longer than 3 seconds, the waveform will be “clipped” in an attempt to reduce the output to under 2000 Watts. If “clipping” the waveform is ineffective in reducing the output below 2000 Watts (as would be the situation for an overload/short circuit condition), the power module will shut down after a period of about 7 seconds. Once shut down, it requires cycling the inverter system's ON/OFF switch to reset from this condition. The cause of the overload/short circuit condition must be removed prior to cycling the ON/OFF switch, otherwise, the inverter system will shut down again after the 7 second delay.

## **Monitoring Module**

### **Alarm Card:**

#### **Alarm LEDs:**

The alarm card will monitor and display different alarms from the system through the LED's on the front panel.

#### **On/Off Switch:**

The on/off switch is located on the front plate of the alarm card. It is used to turn the inverter system on and off.

#### **Relay Contacts for Alarms:**

Dry relay contacts are available on the backplane to be used with pre set alarms (Alarm 1/Minor & Alarm 2/Major).

### **Monitor Card:**

#### **Alarm LEDs:**

The monitor card will monitor and display different alarms from the system through the LED's on the front panel.

#### **On/Off Switch:**

The on/off switch is located on the front plate of the monitor card. It is used to turn the inverter system on and off.

#### **Relay Contacts for Alarms:**

Dry relay contacts are available on the backplane to be used with programmable alarms (Alarm 1/Minor & Alarm 2/Major).

### **Ethernet Monitoring:**

An Ethernet port is available on the front panel to connect to a network for remote monitoring of the system. This includes the industry standard Modbus over Ethernet or SNMPv2 remote monitoring or an optional secure SNMPv3 connection.

# NC SERIES POWER INVERTER SPECIFICATIONS

## INPUT POWER (PER EACH POWER MODULE)

MODEL VOLTAGE	MINIMUM (TYPICAL)	SYSTEM (TYPICAL)	MAXIMUM (TYPICAL)	TYPICAL EFFICIENCY @ FULL POWER	PEAK EFFICIENCY @ 1/2 POWER
48V	40V	53V	60V	> 88%	> 91%

## OUTPUT POWER (PER EACH POWER MODULE)

CONTINUOUS POWER	SURGE POWER (3 seconds)	NO LOAD POWER	OUTPUT VOLTAGE	OUTPUT CURRENT	WEIGHT LBS.
2000W	4000W	15W	120V +/-2%	16.7 A	9

## PROTECTION CIRCUITRY

Over Voltage:	Shutoff at maximum input voltage, per input table.
Under Voltage:	Shutoff at minimum input voltage, per input table.
Thermal:	Shuts off due to over temperature condition.
Output Short:	Unit shuts off: electronically limited. Manual reset required.

## GENERAL

CONDITIONS	MINIMUM	TYPICAL	MAXIMUM
WAVEFORM	-	SINUSOIDAL	-
LINE REGULATION	-	.1%	2%
LOAD REGULATION	-	1%	2%
DISTORTION	-	1.5%	2%
FREQUENCY	-.1%	60Hz	+ .1%

## ENVIRONMENTAL

Temperature:	-25°C to +40°C full power, derated -25% per 10°C above 40°C.
Humidity:	5 to 95% non-condensing
Altitude:	-60m to 3,962m (-197ft. To 13,000ft.) Altitudes >13,000ft. thermally derate from 40°C to 30°C.
Cooling:	Thermostatically controlled variable speed forced air.
Warranty:	Full year parts and labor.

## PHYSICAL SPECIFICATIONS

<b>Dimensions:</b>	8.65" x 3.2" x 16.25" (H x W x D)
<b>Weight:</b>	9lbs

## Monitoring Module Electrical Specifications

### Electrical Specifications

<b>Inverter Voltage Reading:</b>	True RMS Voltage +/- 1%
<b>Inverter Current Reading:</b>	True RMS Current +/- 1%
<b>Frequency Reading:</b>	1/10 Hz resolution
<b>DC Voltage Reading:</b>	Nominal DC Voltage +/- 1%

### Physical Specifications

<b>Dimensions:</b>	8.65" x 3.2" x 16.25" (H x W x D)
<b>Weight:</b>	< 1.5 lbs

# NC SERIES 12KW SYSTEM SPECIFICATIONS

## INPUT POWER

MODEL VOLTAGE	MINIMUM (TYPICAL)	SYSTEM (TYPICAL)	MAXIMUM (TYPICAL)	MAXIMUM CURRENT
48V	40V	53V	60V	350A

## OUTPUT POWER

CONTINUOUS POWER	SURGE POWER (3 seconds)	OUTPUT VOLTAGE	OUTPUT CURRENT	WEIGHT LBS. (With Monitoring Module)
12000W	24000W	120V +/-2%	100 A	69

## GENERAL

CONDITIONS	MINIMUM	TYPICAL	MAXIMUM
WAVEFORM	-	SINUSOIDAL	-
LINE REGULATION	-	.1%	2%
LOAD REGULATION	-	1%	2%
DISTORTION	-	1.5%	2%
FREQUENCY	-.1%	60Hz	+.1%

## PHYSICAL SPECIFICATIONS

<b>Dimensions:</b>	8.75" x 21" x 20" (H x W x D) 8.75" x 23" x 20" (H x W x D) (Includes rack/shelf mounting hardware)
<b>Mounting Clearance Requirements</b>	Above: 1.75" (1 U) Front: 18" Rear: 18"
<b>Access:</b>	Rear for Installation and Maintenance and Front for Operation
<b>Control:</b>	Microprocessor control, Ethernet based monitoring
<b>Options:</b>	Pre-charge Circuit Panel PN: 800-DCPRE-400
<b>Accessories:</b>	Blank Position Cover Panel PN: 020-00411-400 Relay Rack Mounting Bracket PN: 020-00317-401 Surface Mounting Bracket PN: 020-00222-400



# NC SYSTEMS POWER MODULE

## **DC Voltage Inputs:**

48VDC inputs are available. It is recommended to have a maximum ripple voltage of less than 5% with the peaks not going above  $V_{max}$  and below  $V_{min}$ .

## **AC Voltage Outputs:**

120V outputs are available (+/- 6%) at 60Hz, (+/- 0.1%).

## **Load Sharing:**

By control system design, the power modules will automatically load share current with other power modules. The load sharing occurs immediately when a module is either added or removed from a power module cage assembly. If a module fails for any reason, the remaining modules will immediately redistribute the load among themselves.

## **Cooling:**

A microprocessor controlled variable speed fan is located on the face plate of the power module. The fan will operate when the module senses an appropriate combination of temperature and power. Fan speed is monitored, and reported to the inverter system monitoring module. Fan speed can be displayed on the power module's LCD display.

## **Over Temperature Protection:**

Each power module will go into thermal shutdown when its internal temperature exceeds the maximum set point. Approximately 5C prior to thermal shutdown, a warning alarm will be sent to the inverter system monitoring module, and will also be displayed on the power module's LCD display. The power module will provide its full rated output up to the temperature listed in the specification sheet. Ambient temperatures in excess of the maximum specification will likely result in thermal shutdown unless the load is reduced appropriately (see detailed specifications for derating). When the power module shuts down, the alarm condition will persist and the cooling fans will continue to run. The power module will automatically restart when it has sufficiently cooled.

## **Overload/Short Circuit Protection:**

If the load attempts to draw current in excess of this value, the output waveform will be "clipped" so that this limit is never exceeded.

The power module has a continuous output of 2000 Watts. In addition, the power module is also able to provide a 3 second surge of up to 4000 Watts (depending on the battery voltage and internal temperature). This surge current is available to supply the inrush current demanded by electronic or motor loads. If the surge persists for longer than 3 seconds, the waveform will be "clipped" in an attempt to reduce the output to under 2000 Watts. If "clipping" the waveform is ineffective in reducing the output below 2000 Watts (as would be the situation for an overload/short circuit condition), the power module will shut down after a period of about 7 seconds. Once shut down, it requires cycling the inverter system's ON/OFF switch to reset from this condition. The cause of the overload/short circuit condition must be removed prior to cycling the ON/OFF switch, otherwise, the inverter system will shut down again after the 7 second delay.



# NC SYSTEMS ALARM CARD

The alarm card can be added to 19" & 23" power module cage assemblies.

The alarm card is powered by the inverter or utility.

AC & DC alarms only (Non-Programable)

No data reporting through Ethernet.

Data can be monitored via power module LCD display.

## **Faceplate Displays:**

### **INVERTER SWITCH:**

Up is "ON" and Down is "OFF"

### **PHASE TEST BUTTONS:**

Test the following functions for each phase:


- AC ALARMS
- AC LED STATUS
- MASTER TOGGLE

### **PHASE STATUS LED:**

Will be green when AC power is in specs

### **DC STATUS LED:**

Will be green when the DC power is in specs

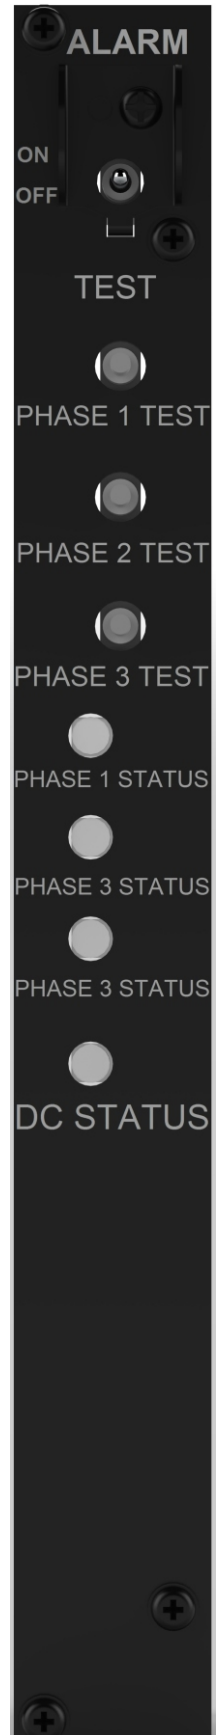



# NC SYSTEMS MONITOR CARD

It is now possible to monitor all of your remote power stations from a single location. You can have up to the minute verification that all of your remote power systems are 100% operational. For example, the remote power system can report that it is currently running at 90% of its rated capacity.

## **Operation**

Normal operation of the monitor card is similar to the alarm card previously described in this document. The biggest difference is the remote monitoring of the system data.

## **Remote Monitoring**

Ethernet connection allows for remote monitoring of system data. Each phase's information can be reported via an Ethernet connection. The data can be sent to a PC to be viewed and logged or reported via SNMPv2 or an optional secure SNMPv3. Programmable alarms (Alarm 1/Minor & Alarm 2/Major) are provided via dry form C relay contacts. Use of the other alarm ports on the back plane may result in damage to the module or system.

## **Differences from Alarm Card:**

- Remote data monitoring
- Allows for programable alarms
- Built in microprocessor that allows for a wider range of system data. Data can be monitored both remotely and via power module LCD display.

## **Faceplate Displays:**

### **INVERTER SWITCH:**

Up is "ON" and down is "OFF"

### **PHASE STATUS LED:**

Will be green when AC power is in specs

### **COMM STATUS:**


Will be green when monitor card is communicating to another device.

### **IP RESET:**

When pushed it will Reboot the communication port

### **Ethernet Port:**

Allows connection to the inverter system via Ethernet cable

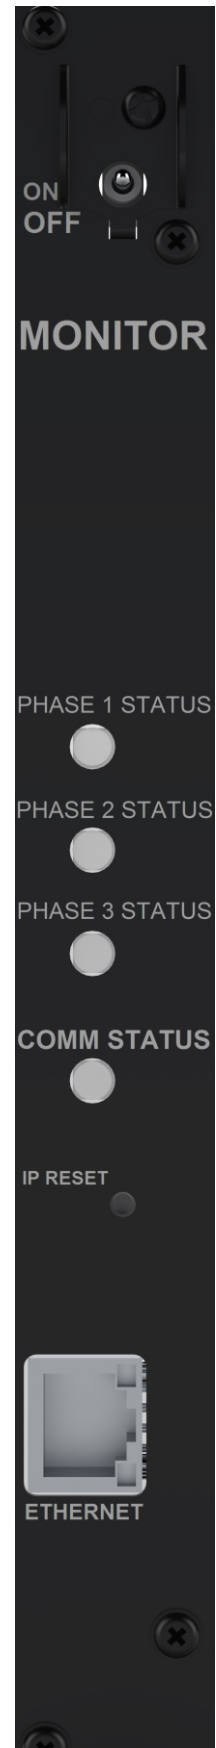

# NC SERIES Part Numbering System

## NC SERIES SYSTEM PART NUMBER

